


Channel Editor (not available for 450S model)


The Channel Editor lets you edit the channels stored in the TV's memory. Using Channel Editor you can:

 
- Change the channel numbers and names, and sort the channels in your desired channel number order.
- Apply the video mute to channels you select. The video mute blanks out the video from a channel and outputs only the sound while displaying a speaker icon on the screen.
- The Channel Editor also lets you view information about each channel easily, without your having to display each channel directly.

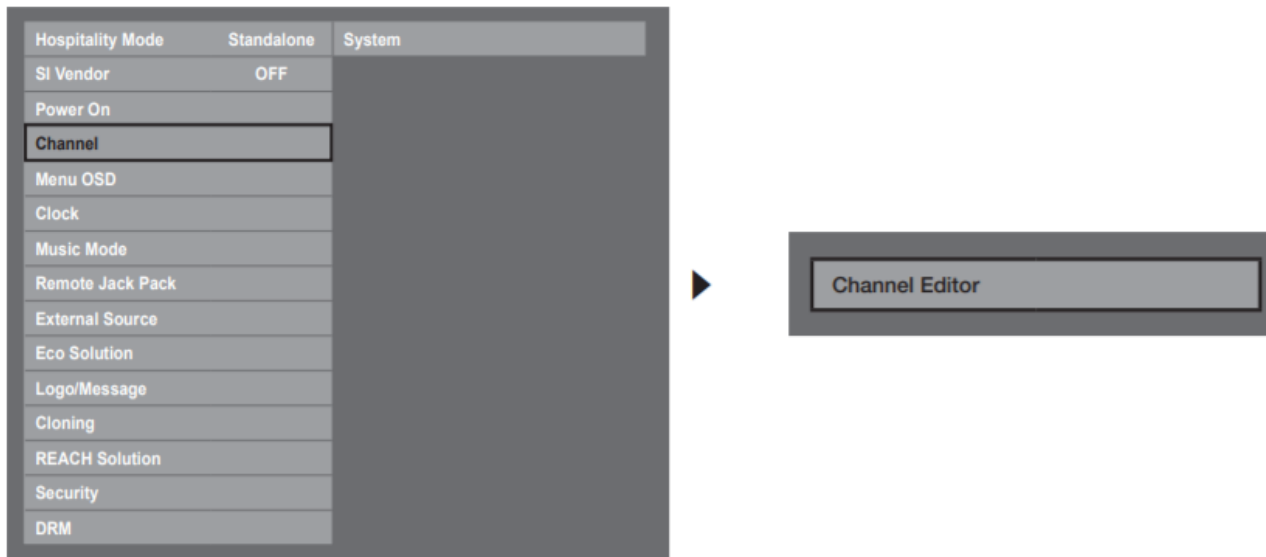

<Depending on model and region, some menu items may not exist.>


Setting the Channel Bank Editor under Stand-alone Mode

1. Press **MUTE + 1 + 1 + 9 + ENTER**  on the remote to enter the Hotel Standalone menu.
2. Go to SI vendor, and then select : “**Smovie**”
3. Find the new menu option, “**Channel**”.
4. Enter the “**Channel Bank Editor**”.



5. Edit the Channel Bank. An example is below.
 - a. Bank1 (Free channel): Select the channels that will be accessible when a remote doesn't have a card.
 - b. Bank2 (Family Card - Green): Select the channels that will be accessible when a remote has a GREEN CARD.
 - c. Bank3 (Adult Card - Red): Select the channels that will be accessible when a remote has a RED CARD.


When you press the TOOLS button, the following menu is available

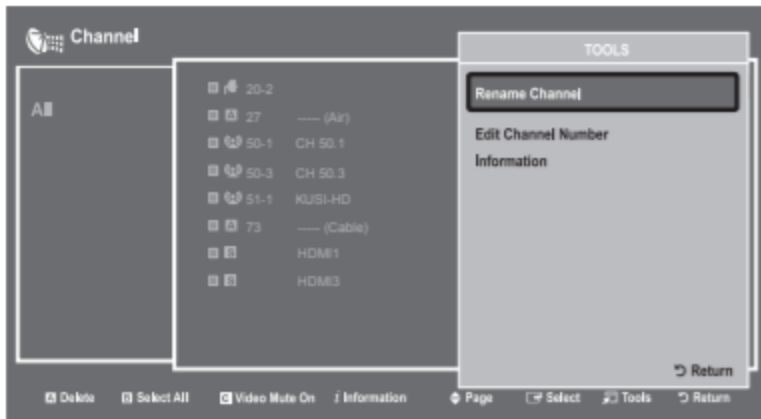


- **Edit Channel Number**

Use Edit Channel Number to change the channel number of a channel you select.

To change a channel number, follow these steps:

1. Select a channel on the **Channel Edit** screen.
2. Press the **TOOLS** button on your remote.
3. Select **Edit Channel Number** in the Tools menu.
4. Use the up or down arrow keys to change the channel number.
5. Select **OK** when done, and then press the **ENTER**  button.

 When you change the channel number, the channel information is not updated automatically.

